

ZOSI

PoE NVR User Manual

Please read instructions thoroughly before operation and retain it for future reference.

Welcome to use this product, this manual will help you set up, operate and use its key functions. Certain features and services may not be available in all areas. For more information, please contact your supplier.

During the preparation of this manual, every effort has been made to make the content correct and complete, but we cannot guarantee that there are no errors or omissions. We insist on continuously optimizing and improving our products and services, and therefore reserve the right to modify the products and content described in this product manual at any time without prior notice.

Notes:

! Do not place objects on this device!

! Do not let any solid or liquid enter the NVR!

! Clean the circuit board, connectors, fans and case with a brush regularly but remember to turn off the power and pull the plug before cleaning .

! Do not disassemble, maintain the device, or replace parts by yourself.

! Avoid knocking this NVR. Do not drop the device.

Operational Environment

! Place and use the product at a temperature of 0 °C ~ 40 °C . Avoid direct sunlight and be away from heat sources.

! Do not install the device in a damp environment;

! Do not expose the device to smoky and dusty environment.

! Keep the device be installed horizontal and in a stable place. Take care to prevent it from falling.

Contents

1 Production Introduction.....	1
1.1 Product overview.....	1
2 Open-package check and cable connections.....	1
2.1 Open-package check.....	1
2.2 Introduce the NVR.....	2
2.3 Device connection.....	2
2.4 Access the System via Smartphone or PC.....	3
3 Basic Operation.....	4
3.1 Turn on.....	4
3.2 System login.....	4
3.3 Preview.....	4
3.4 Desktop shortcut menu.....	5
3.4.1 Single Screen.....	5
3.4.2 Multi Screen.....	6
3.4.3 PTZ.....	6
3.4.4 Start Scan.....	6
3.4.5 Colour.....	7
3.4.6 E -Zoom.....	7
3.4.7 Audio.....	7
3.4.8 Snap.....	8
3.4.9 Start/stop record.....	8
3.5.0 Playback.....	8
3.5.1 Intelligent Alarm.....	9
3.5.2 IPC Channel Configuration.....	10
3.5.3 Main Menu.....	10
4 Main Menu.....	11
4.1 Main menu navigation.....	11
4.2 Configuration Management.....	12
4.2.1 Basic Configuration.....	13
4.2.2 Live Configuration.....	15
4.2.3 Recording Configuration.....	16

Contents

4.2.4 Schedule.....	19
4.2.5 Alarm Configuration.....	21
4.2.6 Network Configuration.....	25
4.2.7 User Management.....	26
4.2.8 PTZ.....	28
4.2.9 Advanced Configuration.....	28
4.3 Data Retrieval.....	29
4.3.1 Time Search.....	29
4.3.2 Event Search.....	30
4.3.3 Image.....	30
4.4 Backup.....	31
4.5 View Information.....	32
4.5.1 System.....	33
4.5.2 Event list.....	33
4.5.3 Log list.....	34
4.5.4 Network.....	34
4.5.5 Online Users list.....	35
4.6 Disk Management.....	35
4.7 Log User off.....	36
4.8 Manual Maintenance.....	36
4.9 Upgrade Maintenance.....	36

1 Production Introduction

1.1 Product overview

The series NVR is designed specially for security and defence field and is an outstanding surveillance product. It introduces embedded LINUX operating system which is very stable. It introduces standard H.265 mp video compressed format and unique temporal and spatial filtering algorithm which insures the high quality image and low bit rate synchronous audio and video surveillance. It introduces TCP/IP network technology which achieves the strong network data transmission capability and remote control capability. The series NVR can be used individually or online applied as a part of a safety surveillance network. With the professional network video surveillance software it achieves the strong network communication ability and telecommunication ability.


The series NVR can be applied in the bank, telecom, electric power system, judicial system, transportation, intelligent housing, factory, storehouse, water conservancy and so on.

2 Open-package check and cable connections

2.1 Open-package check


When you receive the product, please confirm whether it is consistent with the product model you ordered and check carefully whether there is any obvious damage of the product. After opening the casing, check whether the connection between the internal data wire, power wire, fan power wire and so on and the main board are firm .Please protect the labels afixed to the floor or rear panel , which is very important to our aftersales service work. When you contact our company for after-sales service, we need you to provide the model and serial No. on the label.

2.2 Introduce the NVR

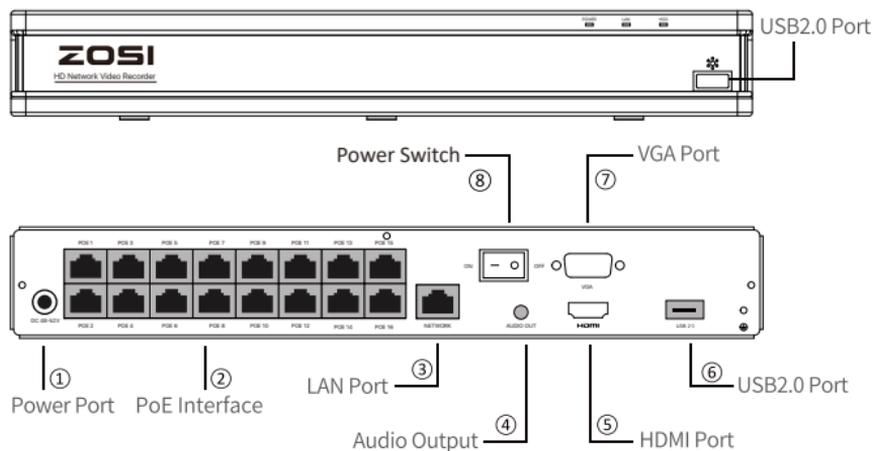

NOTE: To ensure the device works properly, it is recommended to power on the PoE NVR first for testing before a final installation.

2.3 Device connection

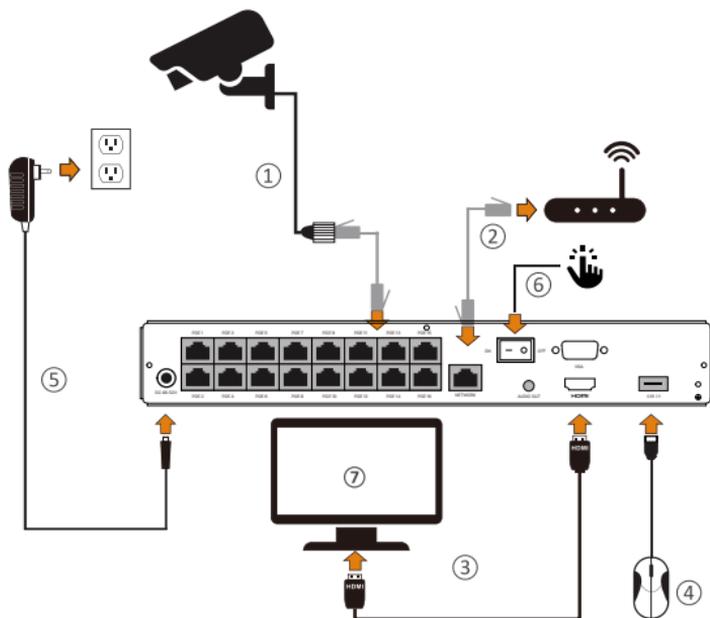

- ① Connect the Cameras to the PoE NVR with 60ft(18.3m) Ethernet Cable.
- ② Connect the PoE NVR to the Router with 3ft(1m) Ethernet Cable.
- ③ Connect the PoE NVR to the Monitor with VGA or HDMI Cable.
- ④ Connect the USB Mouse to the USB2.0 Port.
- ⑤ Connect the PoE NVR to the Power Outlet.
- ⑥ Turn on the power switch and enjoy live view.
- ⑦ The monitor will display live view of the camera.

NOTE: To ensure the device works properly, it is recommended to power on the PoE NVR first for testing before a final installation.

2.4 Access the System via Smartphone or PC

Smartphone

Search “ZOSI Smart” in the APP Store or use a browser to scan the QR code below, download and install the app and follow the instructions to register an account.



Zosi Smart



App (IOS/Android)



App video operation link

PC

Download path: Go to <https://www.zositech.com/pages/app>.

3 Basic Operation

3.1 Turn on

Plug the power supply, the power indicator light will illuminate and the video recorder turns on, you will hear a beep at this time. After startup, the default setting of the system is multiple-screen output mode and video recording starting up automatically.


Mouse Operation:

Left Button:

- Preview or Playback Interface: Double-click a single channel to enter full screen and double-click again to exit full screen.
- Navigation Menu: Left click to select a menu option.

Right Button:

- Right click to bring up the main menu when the mouse is on the preview interface.
- Navigation Menu: Right click to exit the menu or return to previous menu option.

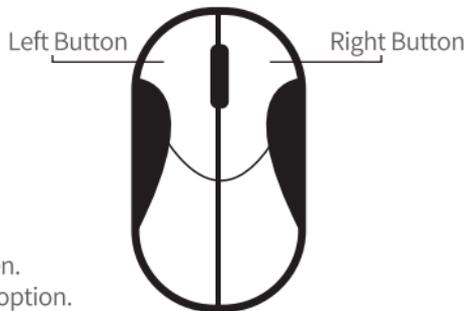

3.2 System login

When the DVR boots up, the user must login and the system provides the corresponding functions with the user preview.

The default user name of the factory equipment is admin, and the default password is blank. You can directly log in to the system when you log in to the system for the first time after starting up.


3.3 Preview

After entering the preview status, double-click the left mouse button to choose the switch between the windows. The system date, time and channel name are shown in each viewing window. The surveillance video and the alarm status are shown in each window.

	Motion Detection Triggered		Face detection Triggered
	Recording		Vehicle Detection Triggered
	Human-Figure Detection Triggered		

3.4 Desktop shortcut menu


In preview mode you can right click mouse to get a desktop shortcut menu and right click mouse again to ESC the desktop shortcut menu.

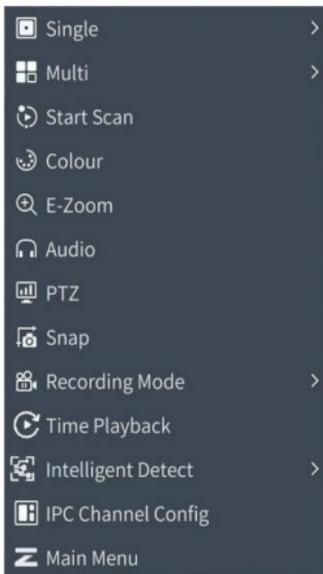

- Single - Select single channel for live viewing
- Multi - Select multi-channel for live viewing
- Start Scan - Start/Stop Scan
- Colour - Adjust colour and image settings
- E-Zoom - E-Zoom the preview interface
- Audio - Adjust the camera volume
- PTZ - Control the rotation of PTZ camera
- Snap - Snap and save the live view images
- Recording Mode - Start/stop record
- Time Playback - Search Video and quick playback
- Intelligent Detect - Set up Human Detection and
- IPC Channel Configuration - IPC channel
- Main Menu - Enter the Main Menu


3.4.1 Single Screen

Select a channel for single-screen viewing.

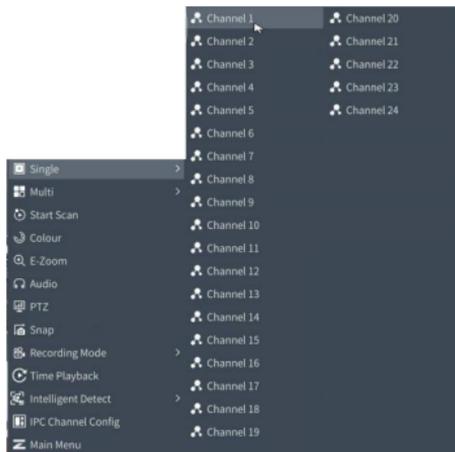


3.4.2 Multi Screen

Select the corresponding different multi-screen mode to watch.

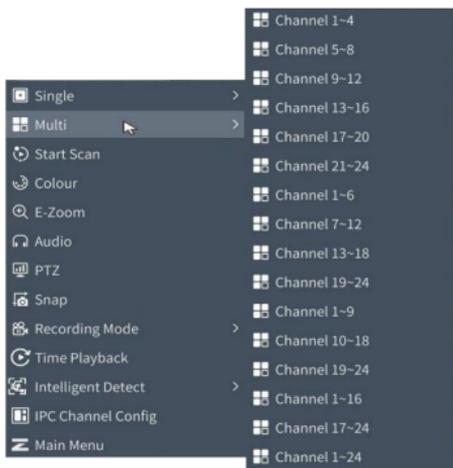

3.4.3 PTZ

Control the rotation of the PTZ camera and set the automatic cruise/preset point cruise.

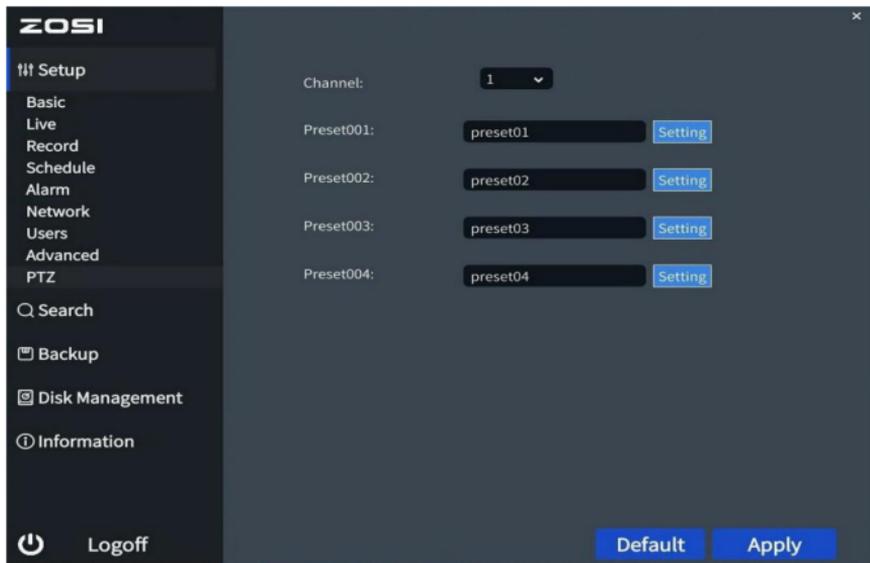


3.4.4 Start Scan

Start Scan means the system will show each live picture in order automatically according to the order of the video devices in the channel grouping. Only when the user selects the channel grouping under the display mode[main menu]>[configuration management]>[live], and it can not show all channels completely under the current preview, this button is available.

3.4.5 Colour

Set image parameters for all channels. The image parameters include: brightness, contrast, saturation and hue.

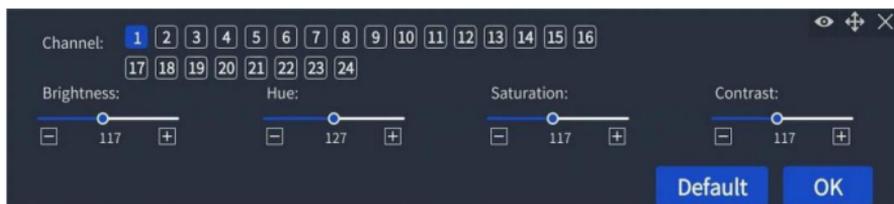


3.4.6 E -Zoom

E-Zoom for big picture of single channel.

3.4.7 Audio

Set startup, turn-off and silent mode of audio for the channel, and adjust the volume ..After select (automatic), it will start up audio of the big picture channel automatically.

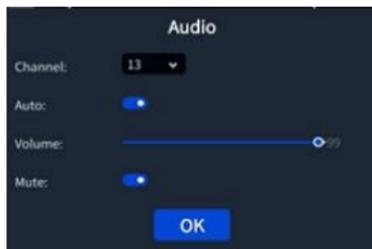

3.4.8 Snap


Snap a screenshot of the current channel.

3.4.9 Start/stop record

After clicking start recording, the system will start full-time recording; after clicking stop recording, the system will stop full-time recording.

3.5.0 Playback

Right click the mouse - Playback - Video Playback/Quick Playback, Video Playback: Playback the video clips via time search or event search. Quick Playback: Quick playback of the first 30 minutes of video.

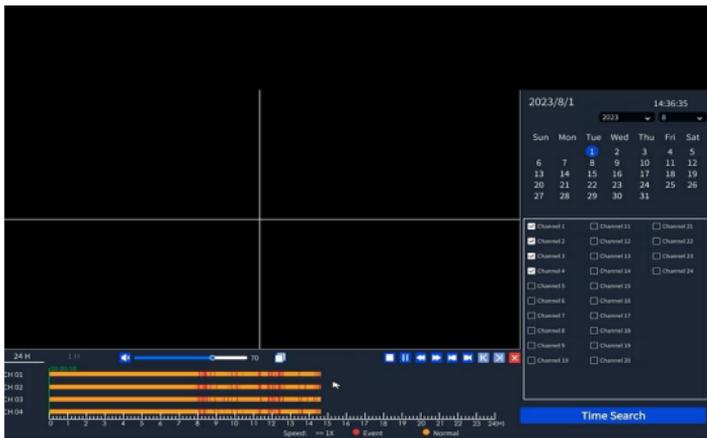

Previous Video: Play the previous video.

Next Video: Play the next video.


Fast forward: You can play the video clips at 1/4 time speed to 16 times speed.

Rewind: You can rewind the video clips at 1 time speed, 8 times speed, 16 times speed, and 32 times speed.

Screen Modes: Single Channel Playback/Multi-channel Playback. Channels without video playback will show a black screen.

3.5.1 Intelligent Detect

Set up Intelligent Alarm and Siren-Light Alarm.

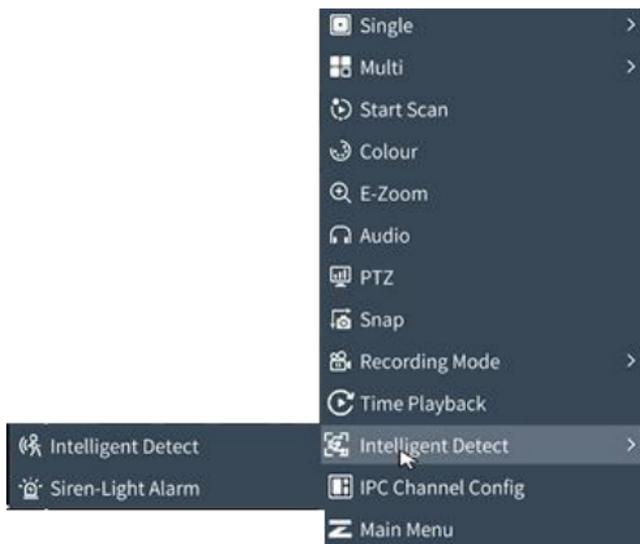

3.5.2 IPC Channel Configuration

View camera version information, add cameras, upgrade cameras, etc.

The screenshot shows the 'IPC Channel Config' window. It contains a table of existing channels and a form for adding new ones.

Index	IP Address	Subnet Mask	Port	Protocol

CH	IP Address	Firmware Version	Port	Protocol	Connect State
01	192.168.138.107	V4.0.7.C22501800EA	32540	Private Protocol	Connected
02	192.168.138.102	V4.0.7.C18201800EA	32540	Private Protocol	Connected
03	192.168.138.101	V4.0.7.C18201800EA	32540	Private Protocol	Connected
04	192.168.138.113	V4.0.7.C22501800EA	32540	Private Protocol	Connected
05	192.168.138.1	V4.1.9.823C01550KA	32540	Private Protocol	Connected
06	192.168.9.109	V4.1.9.823C01550KA	32540	Private Protocol	Connected
07	192.168.9.111	V4.2.0.730201350AA	32540	Private Protocol	Connected

Form fields for adding a channel:

- IPC No.: Channel 1
- IP Address: 192.168.001.000
- Subnet Mask: 255.255.255.000
- Protocol: Private
- Port: 5000

Buttons: Add, Search, Auto Add, Upgrade, Delete, Refresh

Auto Add:

3.5.3 Main Menu

Enter the system main menu interface.

The screenshot shows the 'ZOSI System' main menu. The left sidebar contains navigation options: Setup, Basic, Live, Record, Schedule, Alarm, Network, Users, Advanced, PTZ, Search, Backup, Disk Management, and Information. The main panel is titled 'System' and contains the following configuration options:

- System Type: HNVR
- System Number: 0
- Password Check:
- Show System Time:
- Max Online Users: 1
- Video Output: 1920X1080
- Language: English
- Logout After [Minutes]: Never
- Startup Wizard:

Buttons: Default, Apply, Logoff

4 Main Menu


4.1 Main menu navigation

Main menu	Submenu	Function
configuration management	Basic configuration	Set the system time, date format, time format, language, the device number, video format, standby time, daylight saving time
	Live configuration	Set the channel name, color, display mode, privacy mask, etc.
	Recording configuration	Start up video recording, set up the video stream, position of channel name, video circulation, snapshot, etc
	Schedule Plan	Set timer recording, motion alarm recording, period of intelligent recording
	Alarm configuration	Set motion detection, video loss, other alarms, intelligent alarms, sound and light alarms, etc.
	Network configuration	Set basic network parameters, email
	User management	Modify users, change passwords, add users and delete users
	PTZ	Set the preset point of the PTZ camera
	Advanced configuration	Restore the factory settings, import and export the device parameters, system maintenance
Data retrieval	Time search	Search specified period of time recording, playback the video of this period
	Event search	Search motion detection, human shape detection, face detection, vehicle detection, playback Videos of this period
	Image	Channel screenshots captured by search
Backup		Search for recorded video files, which can be backed up via U disk
View information	System Info	Display the device name, serial number, version, release date
	Event Info	Inquiry and export of motion detection, video loss, sensor alarm and other events
	System log	Search equipment operation log according to time, it can also be exported
	Network status	Display network settings and status
	Online users	Display the current network users accessing the device

Hard disk management		Show hard disk's total space, free space, read and write status and to format the hard disk
After log-off, exit system and log in		After log-off, exit system and log in
Manual maintenance		After manual maintenance, the system will automatically restart
Upgrade		The system version can be upgraded online


4.2 Setup Management

Set every function parameters for the device, including: basic configuration, live configuration, recording configuration, recording plan, alarm configuration, network configuration, user management, PTZ configuration, advanced configuration.

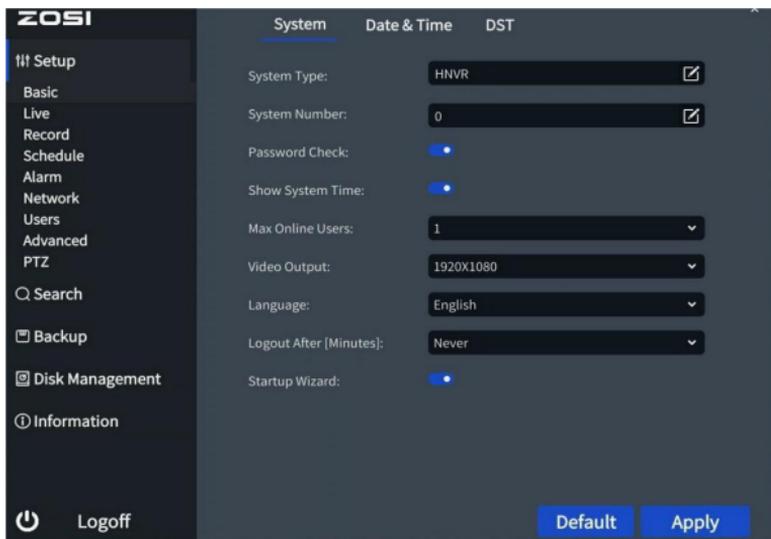

4.2.1 Basic Configuration

Basic configuration includes three sub menus: system, date and time, daylight saving time.

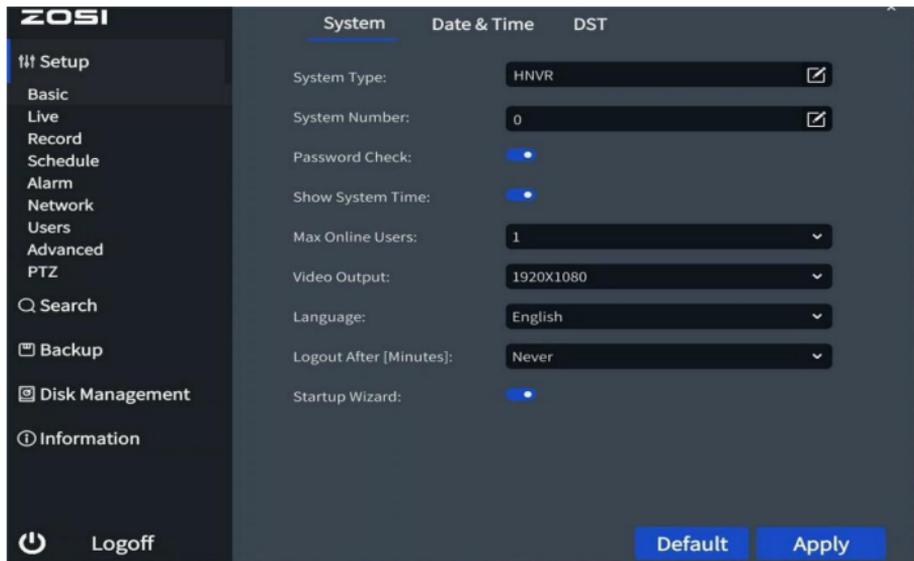

1. The system

[Device Name] Client or system name displayed.

[Device Number] Client system number.

[Password Check] Choosing this item means user must enter user name and password in the system Settings, and have corresponding purview before corresponding operations.

[Show System Time] Choose whether to display time in the field or not.

[Max Online Users] Set the number of network users visiting the device.

[Video Output] Users can choose 1027*768, 1280*1024, 1920*1080, 2560*1440, 3840*2160 and other output resolutions.

[Logout After (Minutes)] When there is no action exceeding the set time, the system will automatically log out.


[Startup Wizard] Whether to display wizard or not when turn on the machine.

2. Date & Time

In this interface, set the date format, time format, time zone; you can also adjust the system time manually.


Note: the default time zone of the system is GMT.

You can select [Time Synchronization] to correct time. Network time server can be set.

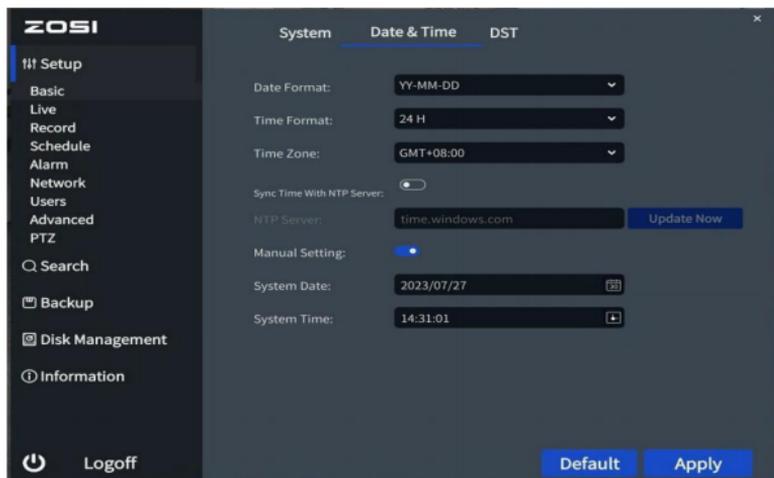


3. DST(Day Light Saving)

Set the start and end time of daylight saving time by week or date.

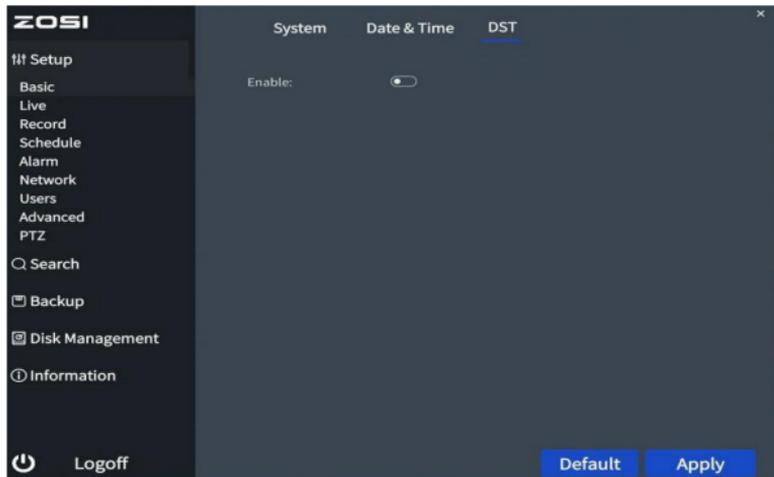

4.2.2 Live Configuration

Live configuration includes three submenu: Live, Main Monitor, Video Blind.

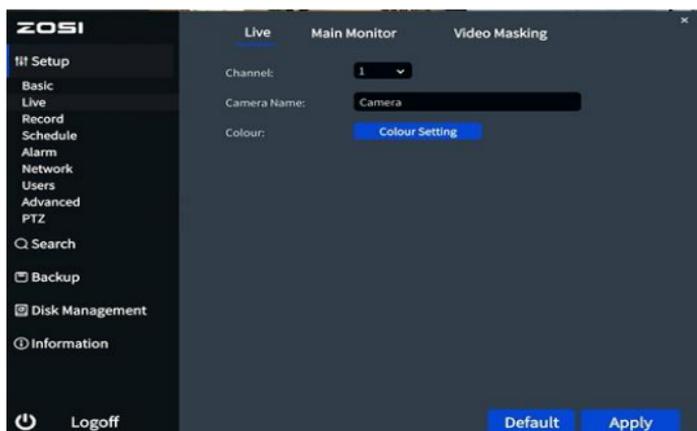


1. Live


[Camera Name] Click channel Name, the system will pop up a soft keyboard, users can change the channel name if necessary. Clicking the “shift “ key to switch input methods [Colour] Users can adjust the brightness, hue, saturation, and contrast of the corresponding channel

2. Main Monitor

[Interval] The time interval between one channel picture and the next one channel.

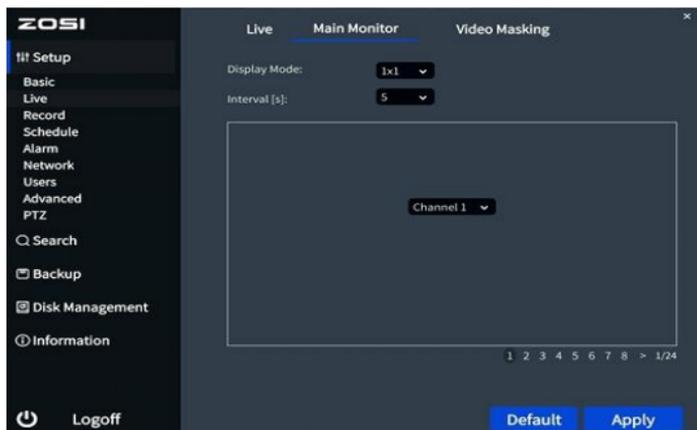

3. Video Masking

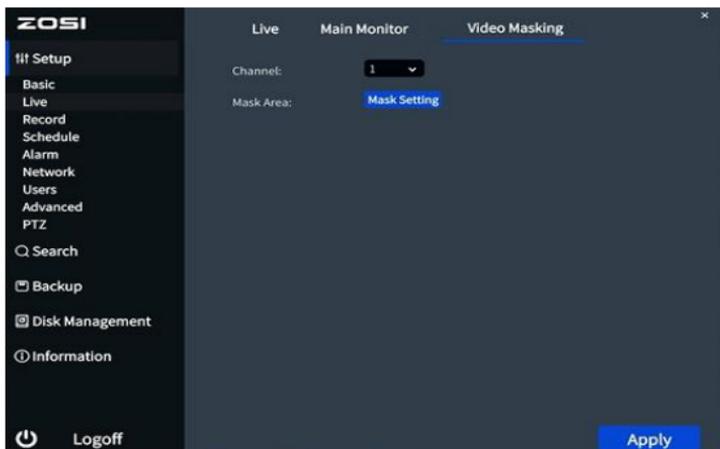


Users can cover up some areas of the live picture, maximum of five areas per channel. [Setting] After entering the live picture, press and hold the left mouse button, drag the mouse to set the blocked area, then click [apply] to save the settings; Double-click on the area you want to delete, later changed into a black area, right-click, Exit. then click [apply] can delete the blocked area.


4.2.3 Recording Configuration

Record configuration includes six submenus: Enable, Record Bitrate, Stamp, Recycle Record, Snap.

1. Enable

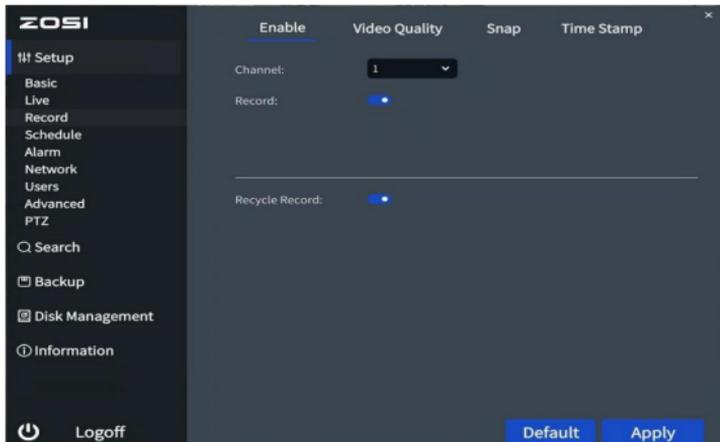


2. Video Quality

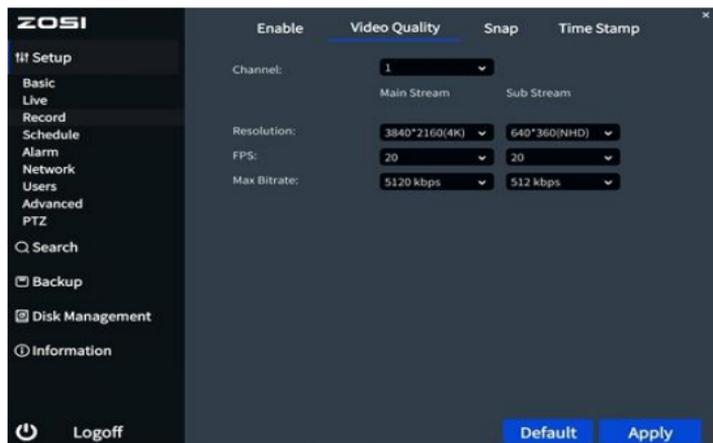

Check the main stream and sub stream information.
[Resolution] Display/select camera resolution.


3. Time Stamp

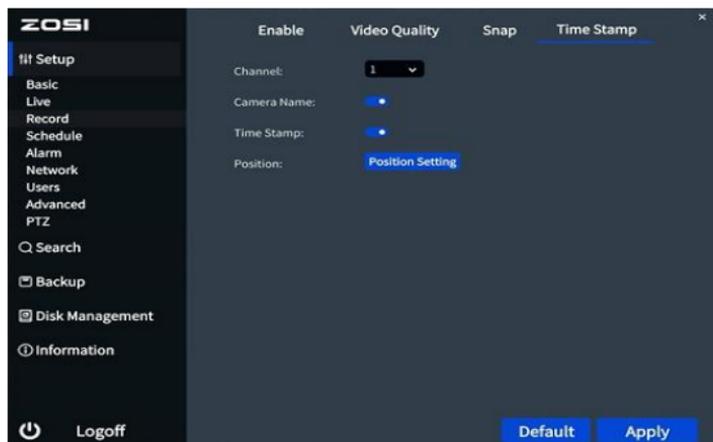

[Camera Name] Choose whether to display the channel name or not.
[Time Stamp] Choose whether to display time on this channel or not.
[Position] After clicking this button, Users can use mouse to drag the channel name and time stamp to any position on the live image.


4. Recycle Record

After selecting this item , When the hard disk is full, it will automatically cover the earliest files and continue recording ; Otherwise, it will automatically stop recording and prompt "The remaining space is insufficient" on the screen.

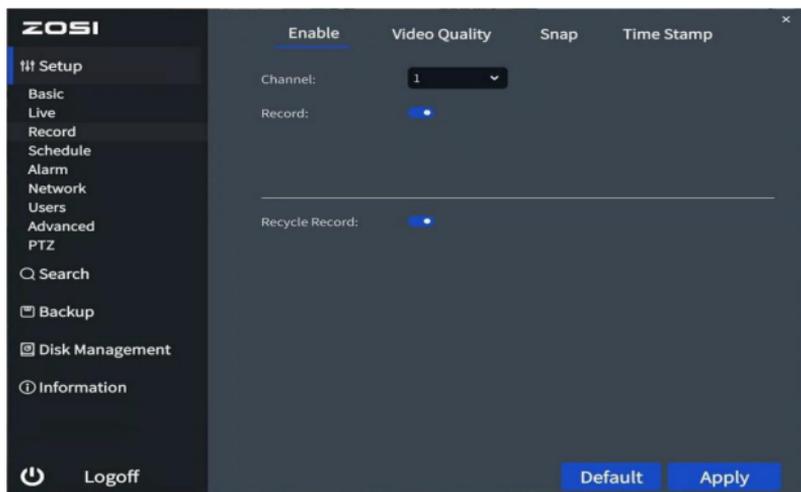

5. Snap

View screenshot information.

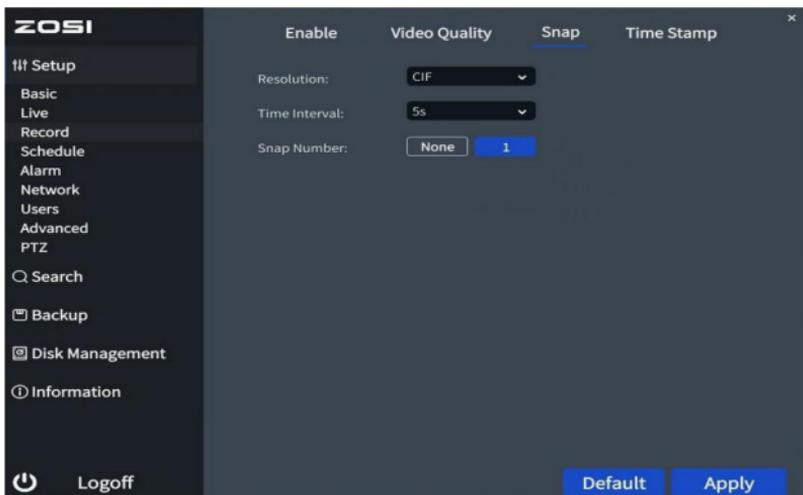


4.2.4 Schedule

Schedule includes three submenus: timing recording, motion alarm recording, and intelligent recording.

1. Timing Recording

Select the channel: Double click the left mouse button, edit the week plan, as shown in the picture.

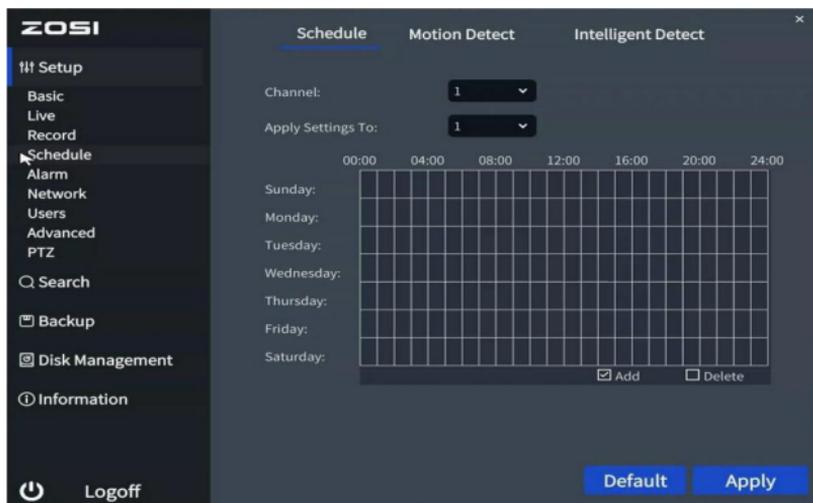


[Copy] Apply the schedule of a channel to the other or all channels.

2. Motion Alarm Recording

The setting method is the same to the timing recording setting, please refer to the timing recording settings.


Note: The default Schedule for Motion alarm is all selected.

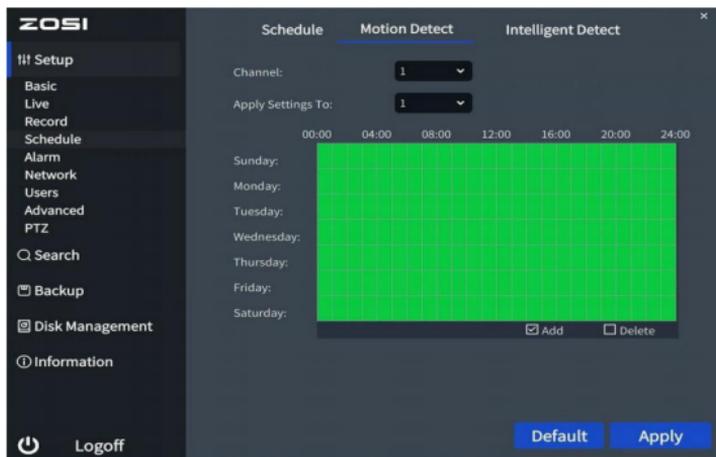

3. Intelligent alarm


The setting method is the same to the timing recording setting, please refer to the timing recording settings.

Note: The default Schedule for intelligent alarm is all selected.

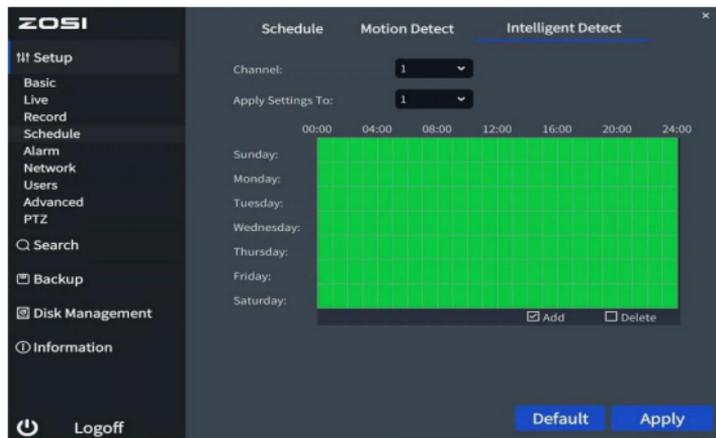


4.2.5 Alarm Configuration

Alarm configuration includes five submenus: Motion detection, Video loss, Other alarm, Intelligent alarm, Siren-Light alarm.

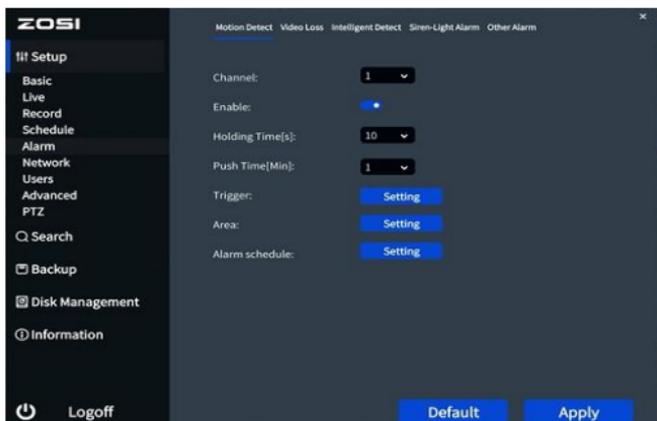

1. Motion Detection

Motion detection includes two submenus: motion detection and schedule.

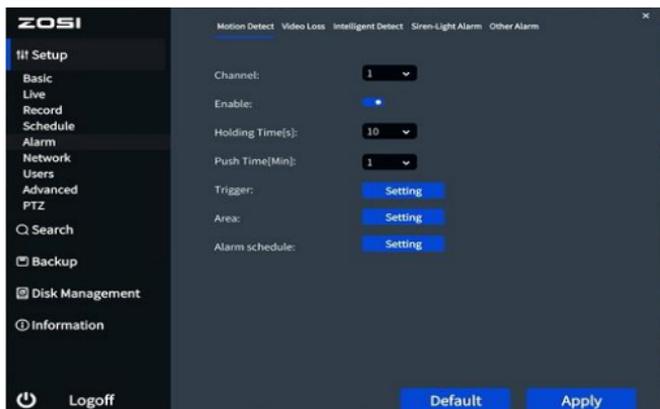

1-1. Motion Detection

By analyzing the video image, when the system detects a motion signal which reaches a preset sensitivity, motion detection alarm and the linkage function are initiated.

[Enable] After selected, the motion detection function of the corresponding channel will be opened.

[Holding Time] To select alarm delay time of the channel .Optional time: 5/10/20/30/60/120s always.

[Push time] Select the channel APP alarm push time, optional 1/2/3/5/8/10 minutes.

[Alarm Handling] Click to set the alarm configuration:

[Buzzer] After selecting the alarm, when an alarm is triggered , the buzzer will alarm.

[Show Full Screen] When an alarm is triggered, the alarm channel screen will activate

[To Alarm Out] Select this item, it will trigger an alarm on the specified alarm output

[Email] When an alarm is triggered, the system will send the relevant information to the user-specified mailbox, such as alarm event, snapshot, device name, device number, etc.

[Snap] When an alarm is triggered, the system will automatically capture the images of the selected channel and store them to the hard disk.

[Regional Settings] In this interface, users can drag the scroll bar to adjust the sensitivity value (1-8), the default value is 4, the smaller the value, the higher the sensitivity. Because the sensitivity is affected by the color time (day or night), the user should adjust the value according to the actual situation;


1-2. Recording Schedule

The setting of Motion Detection Schedule is the same to that of Timing Recording, For the detailed steps please refer to 4.2.4 - [Recording Schedule] [Timing Recording].

Note: The default schedule of motion detection is all selected.

2. Video Loss

The setting of video loss alarm processing is the same to that of motion detection alarm processing.

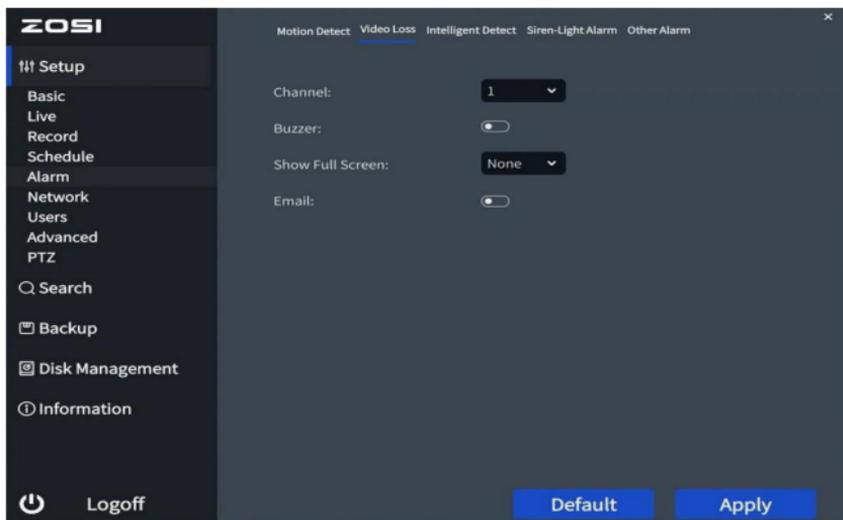

3. Other Alarm


[Alarm Type] Including hard disk full, network address conflict, disconnection, HDD attenuation warning and disk loss.

[Buzzer] When an alarm occurs, the device will emit "didi" two long beeps.


[Email] When an alarm is triggered, the system will send the relevant information to the user-specified mailbox, such as alarm events, snapshot, device name, device number, etc.

[To Alarm Out] To select this item, it will trigger an alarm on the specified alarm output.

[Disk Shortage Alarm] When the remaining capacity of the disk reaches the set value, an alarm will be triggered.

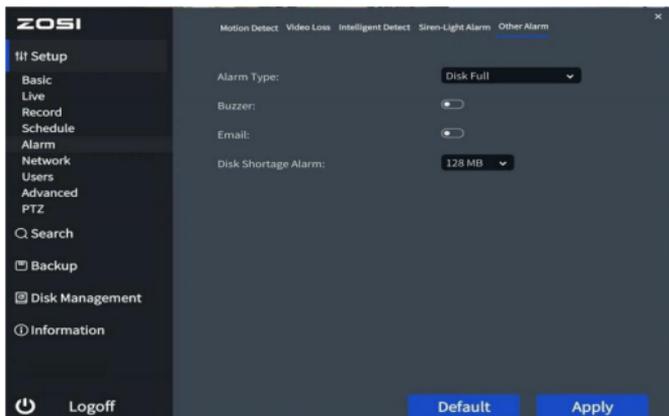

4. Intelligent alarm

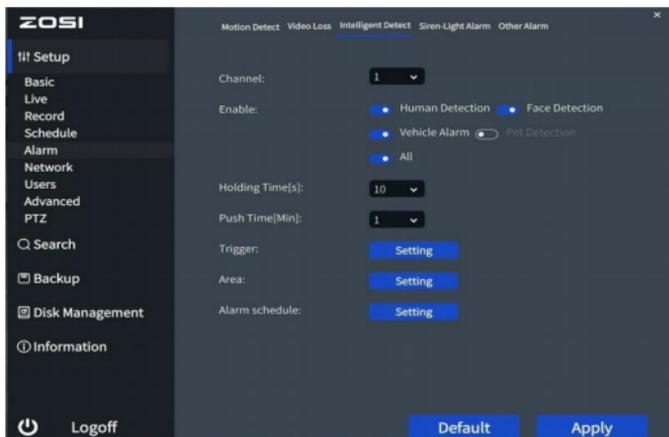

[Alarm type] Set to select the alarm type such as humanoid detection, face, vehicle, etc.
[Holding Time] To select alarm delay time of the channel .Optional time: 5/10/20/30/60/120s always.


[Push time] Select the channel APP alarm push time, optional 1/2/3/5/8/10 minutes.

[Alarm Handling] Same as motion detection alarm processing trigger setting.

[Area Setting] After entering the live screen, press and hold the left mouse button, drag the mouse to set the human figure detection area, click [Save] to save the settings; double-click the set area again to delete the human figure detection area.

Note: The default is to set the whole region.

5. Siren-Light Alarm

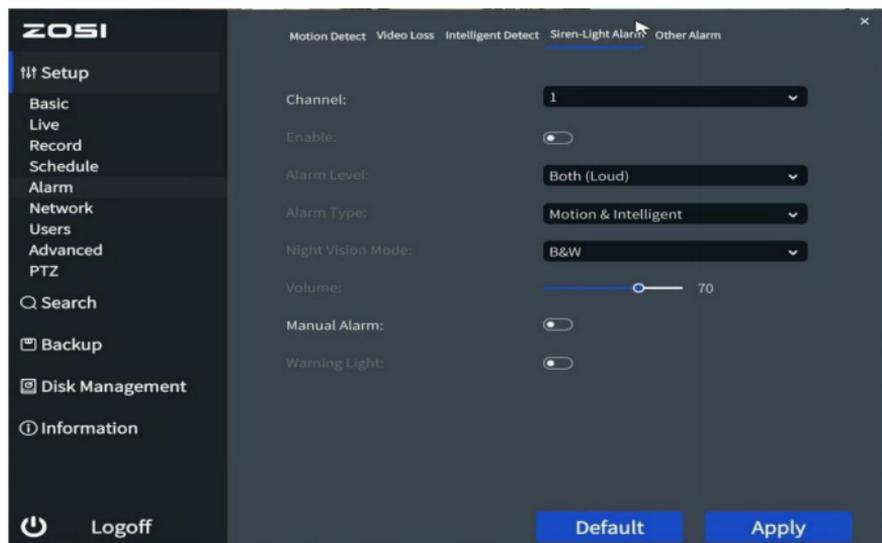

After opening, the sound and light alarm function of each channel can be set.

[Alarm level] can choose strong sound and light alarm, slight sound and light alarm, strong sound alarm, slight sound alarm, strong light alarm;

[Alarm type] can choose motion detection, intelligent alarm, motion detection and intelligent alarm;

[Night Vision Mode] Black and White Night Vision, Full Color Night Vision, Intelligent Night Vision;

[Volume] Adjust the volume;

[Manual alarm] Set manual sound and light alarm;

[LED] can turn on and off the LED warning light of the camera;

4.2.6 Network Configuration

Network configuration includes two submenus: Network, Email.

The screenshot shows the ZOSI Network Configuration page. The sidebar on the left lists various system settings, with 'Network' selected. The main panel is divided into 'Network' and 'Email' sections. The 'Network' section contains the following fields and values:

Field	Value
HTTP Port:	80
Server Port:	5000
Mobile Port:	5001
Obtain an IP Address Automatically:	<input checked="" type="checkbox"/>
IP Address:	192.168.9.110
Subnet Mask:	255.255.255.0
Gateway:	192.168.9.1
Preferred DNS Server:	192.168.9.1
Alternate DNS Server:	0.0.0.0

At the bottom right of the main panel, there are three buttons: 'Test', 'Default', and 'Apply'. The 'Test' button is highlighted in blue.

6-1 Network

[HTTP Port] Default value is 80.

[Server Port] Default value is 5000.

[Mobile Port] Default value is 5001.

[Obtain an IP Address Automatically] To obtain the IP function automatically.

[IP Address] To set the IP address of the device.

[Subnet Mask] To set the subnet mask of the device.

[Gateway] To set the default gateway of the device.

[Preferred DNS Server] The address is provided by your network operator and must be filled in when using mobile monitoring.

[Alternate DNS Server] The address is provided by your network operator.


[PPPOE] When enabled, the DVR will automatically establish a network connection in the form of PPPOE, then the IP address can be seen through [Main Menu]-[View Information]-[Network Status]

[User Name] Enter the ISP (Internet Service Provider).

[Password] The set password.

[Test] Test whether the entered IP address and PPPOE information are valid or not.

6-2 Email

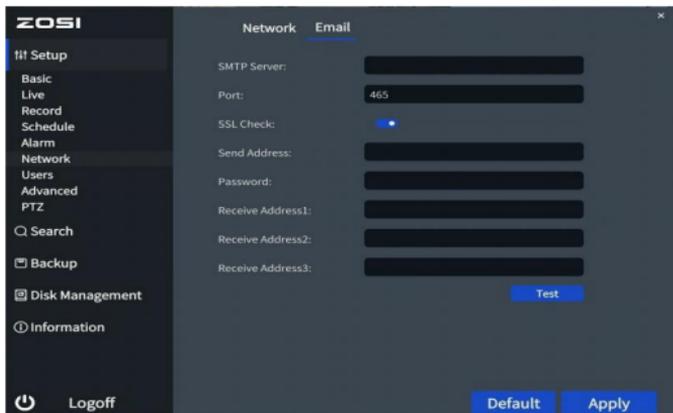

[SMTP Server] Mail server address can be IP address and domain name (if it is domain name, it is required to confirm that the DNS setting is right, then it can be correctly resolved) e.g.: smtp.gmail.com.

[Port] Mail server port number, the default port is 465.

[SSL Check] Provide secure socket layer to login on.


[Send Address] E-mail address of the mail server.

[Password] The corresponding password of the Sender's E-mail.


[Receive Address] When an alarm is generated, the system will send email to the set mailbox, but the number of the set recipient mailbox can be no more than 3.

[Test] Test whether the current mailbox configuration is successful or not.

4.2.7 User Management

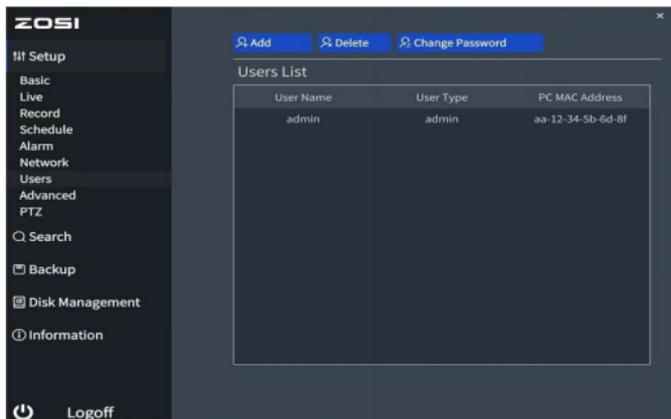

The default administrator name is admin, there is no password set.
Note: The length of the user name and password is no more than 32 characters.
[Add] Add a user name and set the user's permissions.

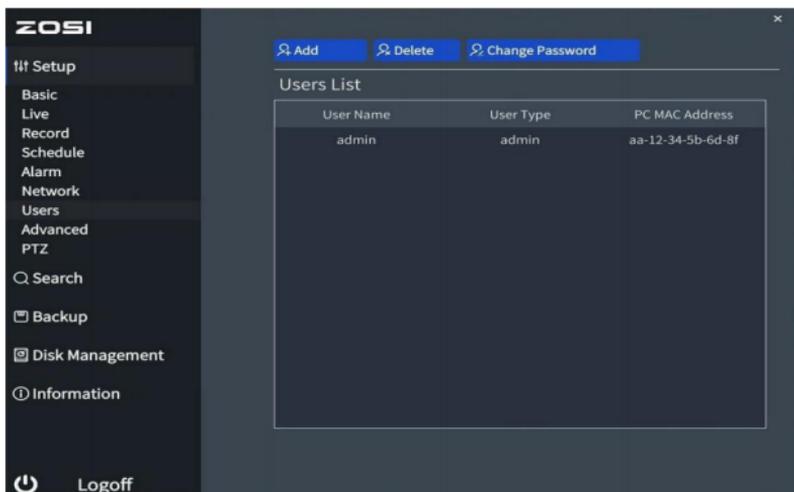


The screenshot shows the ZOSI web interface. On the left is a dark sidebar with a menu. The main content area is titled 'Users List' and contains a table with one row of data. At the top of the main area are three buttons: 'Add', 'Delete', and 'Change Password'. The sidebar menu includes 'Setup', 'Basic', 'Live', 'Record', 'Schedule', 'Alarm', 'Network', 'Users', 'Advanced', 'PTZ', 'Search', 'Backup', 'Disk Management', and 'Information'. A 'Logoff' button is at the bottom of the sidebar.

User Name	User Type	PC MAC Address
admin	admin	aa-12-34-5b-6d-8f


4.2.8 PTZ

1.[Preset] Click the [Setting] button, and the following window will pop up:
The user can adjust the PTZ to a suitable position through the button on the tool bar, click [Save], the preset point is set successfully, and a maximum of 4 can be set.

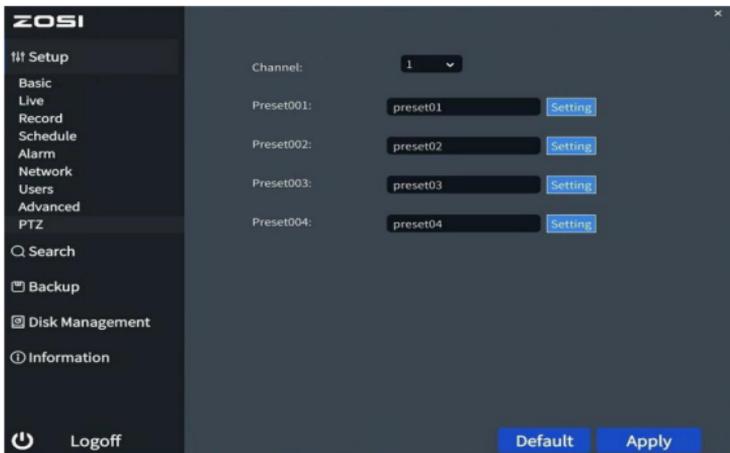

4.2.9 Advanced Configuration

Advanced setting includes three submenus: Reset, Import/Export,system maintenance.

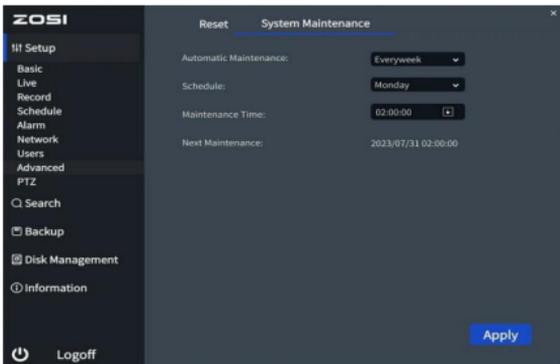

[Reset] Reset all settings to the factory settings status.

[Import/Export]

(1)Through “Import/Export” , you can export the parameters to other devices directly. There is no need to reconfigure other devices.


(2)The system language can be changed by import language files.

[System Maintenance] By default, the system will automatically restart at 2 am every Monday, and the maintenance time can be customized.

4.3 Search

Mainly includes Time Search, Event Search, and Image.

4.3.1 Time Search

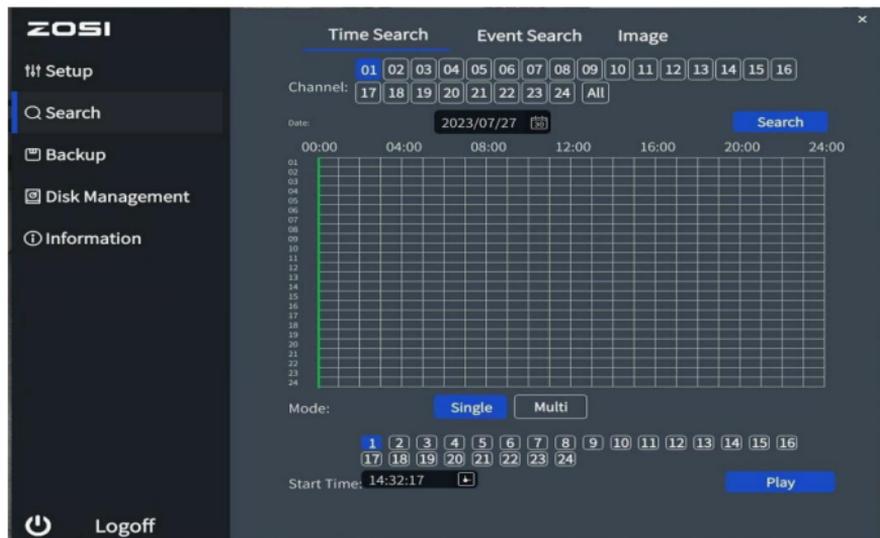

Select the channel to play




Start playing

[Search] Search the video file of set channel and time, then click the play button to start playback.


Note: The highlighted date in the calendar indicates there is video file on that day .

4.3.2 Event Search

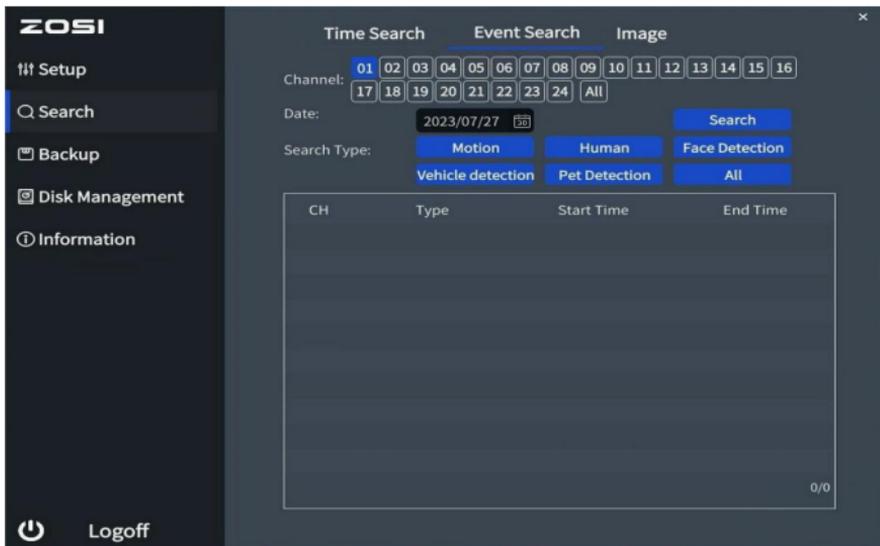

[Search] Search the video file of set channel and time, after selecting the file, double click to start playback.

4.3.3 Image

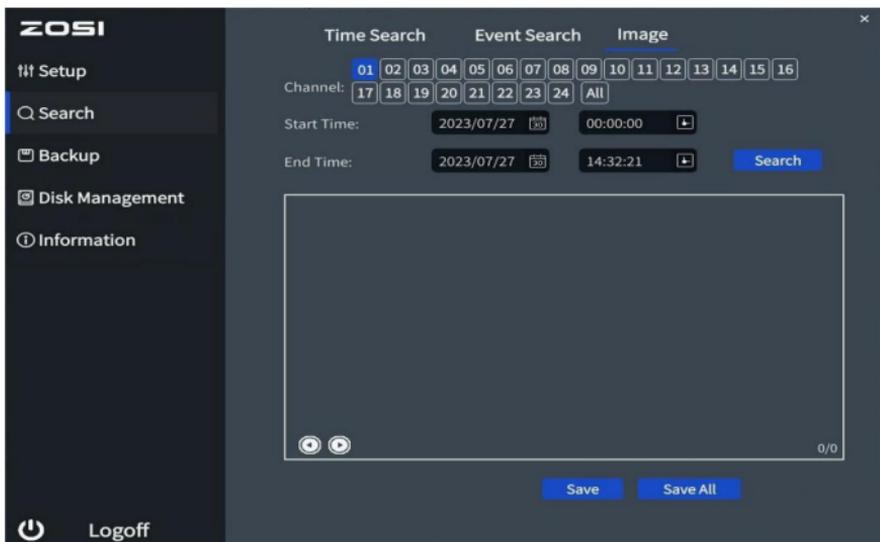


[Search] To search the image file of set channel and time.

[Save] Save the currently displayed image to a removable storage device. [Save All] Save all the captured images to a removable storage device.

Note: 1. The default number of storage image is 2000. If it is more than 2000, the system will automatically overwrite the previously unlocked images.

2. Double-click the image, you can playback the video from the time when the image was captured.

4.4 Backup

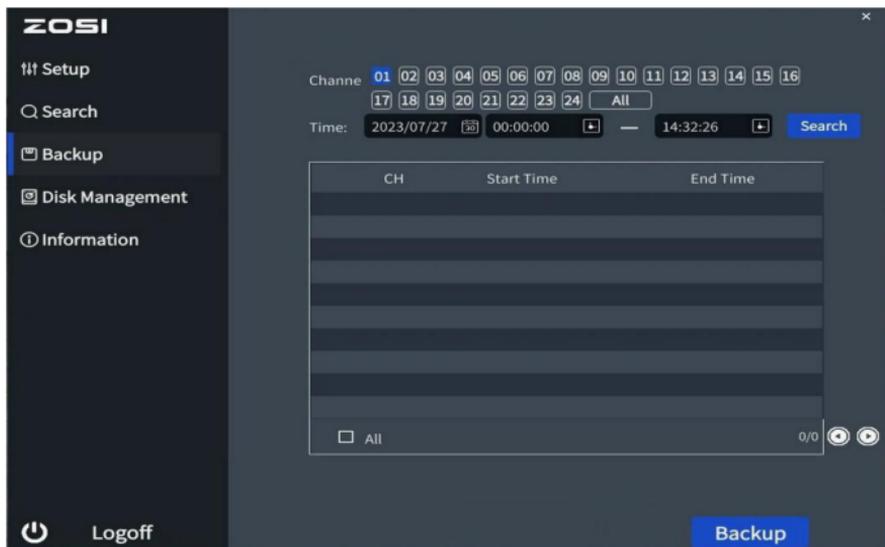


By setting, you can backup the video file to the external storage device

Note: You need to install the storage device capable of accommodating the storage files before backing up the files.

[Search] To select the files that need backup according to time and channel. [Backup] Select files in the list and click “backup”, then it will popup a dialog box of backup information, as shown in figure:

4.5 View Information

including six submenus: system information, event information, system log, network status, and online users and other relevant information.

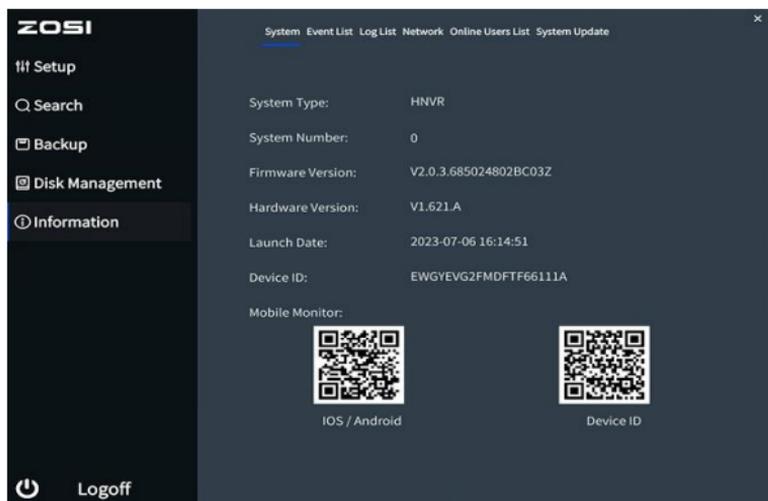


The screenshot displays the ZOSI web interface. On the left is a dark sidebar with the ZOSI logo at the top and a menu with the following items: Setup, Search, Backup, Disk Management, and Information (which is highlighted). At the bottom of the sidebar is a power icon and the text 'Logoff'. The main content area has a dark background and a top navigation bar with links for System, Event List, Log List, Network, Online Users List, and System Update. The 'System' link is underlined. Below the navigation bar, the following system information is displayed:

System Type:	HNVR
System Number:	0
Firmware Version:	V2.0.3.685024802BC03Z
Hardware Version:	V1.621.A
Launch Date:	2023-07-06 16:14:51
Device ID:	EWGYEVG2FMDFTF66111A

Below the table, under the heading 'Mobile Monitor:', there are two QR codes. The first QR code is labeled 'IOS / Android' and the second is labeled 'Device ID'.


4.5.3 Log list

Users can search the operation information of the login user based on time and the operation type. After formatting the hard disk, the information will be cleared.

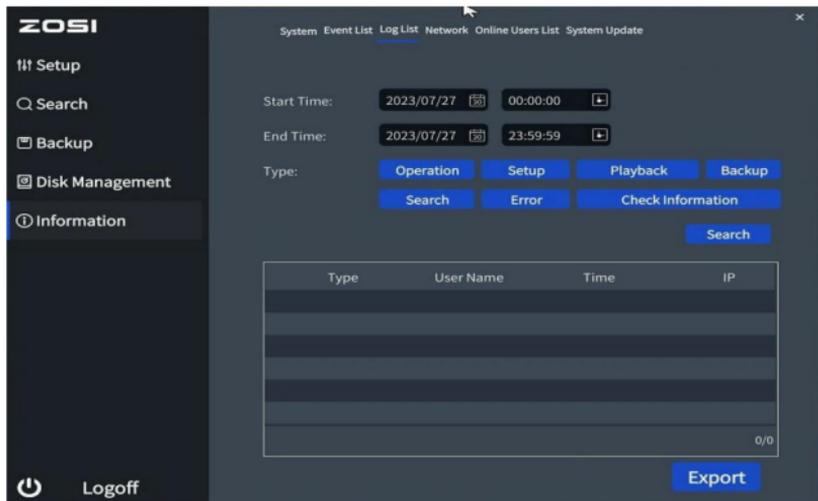


4.5.4 Network

Users can view the related parameters of the network settings.

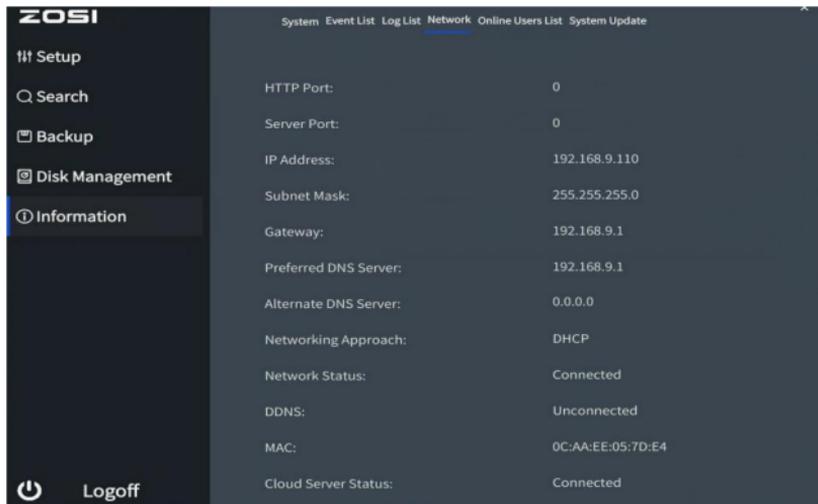

4.5.5 Online Users list

See the network user information connecting the local NVR.

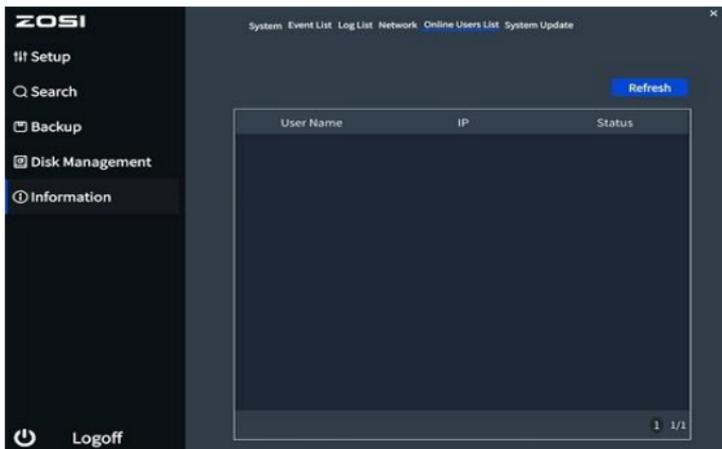


4.6 Disk Management

[Refresh] To re-check the disk that can be indentified.

[Browse] To check the information of the selected hard disk, including hard disk capacity, free space, hard disk status, properties, the total number of pictures that can be stored, stored number of pictures.

[Format] To delete the data on the selected hard disk, including locked files and images.

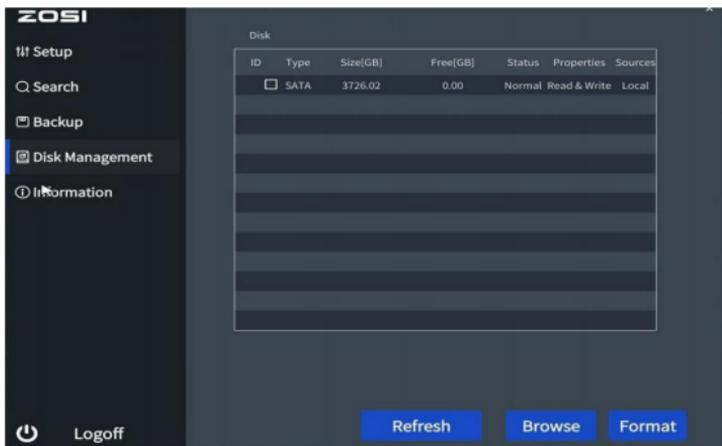

4.7 Log User off

The current user logs out of the system. If the user wants to log in again, click the main menu icon and enter the user name and password on the login interface to log in to the device again.

4.8 Manual Maintenance

If manual maintenance is confirmed, the system will automatically restart.

4.9 Upgrade Maintenance

[Upgrade] After the system is connected to the Internet, it will detect a new version, click this button, and the system will automatically upgrade. The upgrade process takes about 5 minutes.

ZOSI



www.zositech.com

Support Email: service@zositech.com

Facebook: <https://www.facebook.com/ZosiTechnology/>

Whatsapp: +1-866-841-6932

UK Whatsapp: +86 18675610962

Copyright © 2023 ZOSI Technology Co., Ltd.

No part of this publication may be reproduced in any way without the written permission of ZOSI. The information in this publication is believed to be accurate in all respects. ZOSI assumes no responsibility for any consequences resulting from their use. As our products require continuous improvement, ZOSI reserves the right to modify product designs, specifications and prices without notice and without any obligation. All rights reserved, and ZOSI reserves the final interpretation right of this manual.

