





9 Camera Battery Life			<b>10</b> Troubleshooting		Image On and Off	<ul> <li>Use the ZOSI App or DVR to ensure that the camera</li> <li>Try to move the camera close to the receiver.</li> <li>Remove obstacles between the receiver and camera</li> </ul>
Total Battery	7800Ma		Questions	Solutions		Your camera may be too far from the monitoring a
Triggered Time	Triggers (Day/Night)	Battery Life (Month)	No picture/ No signal	<ul> <li>Make sure the camera is connected to a compatible DVR.</li> <li>Make sure that the wireless receiver is properly connected to the DVR.</li> <li>Make sure that the battery pack is properly inserted into the camera dock.</li> </ul>	Camera Detects No Movement	within 20 feet (6.1 meters) of the area you want to mo
@10 Second Event Recording	12/8	6				
@20 Second Event Recording	12/8	3		<ul> <li>Make sure that the sticker has been removed from the battery charging contacts.</li> <li>Connect the power adapter to your battery pack to ensure that the power pack is</li> </ul>		
@30 Second Event Recording       12/8       1         Disclaimer:         The above battery working time data is based on the following conditions:         1) Battery consumption varies with temperature and ambient light. The estimated temperature provided is 20c/68f, darker light in the environment may reduce battery life by up to 50% and color climate may reduce battery life by up to 50%.         (2)This is a motion-activated camera, which will only wake up when motion is detected. We recommend to not install in high traffic areas like driveway and walkway in order to increase battery life.				charged. LED indicator of the battery is blue when fully charged, and turns red when the battery is low. • Remove obstacle materials between the receiver and camera, such as bricks, concrete and wood that can significantly affect the strength of wireless signals.	Reflective Image	<ul> <li>Make sure your camera is not pointed directly at th (e.g. the sun or spotlight).</li> <li>Move the camera to a different location.</li> </ul>
				•Try to relocate the camera, receiver, or both to improve reception. Install the receiver on the wall using the included mounting screws.	Night Vision Malfunction	• Night vision function is activated when the brightne The area may be too bright.
			Short	<ul> <li>Make sure the camera is not pointed at a high traffic area. Place the camera to capture only those areas of interest without high traffic zones (e.g. busy sidewalks or roads).</li> </ul>		• Check the camera lens if there's dirt, dust or spider
2)This is a motion-activated c letected. We recommend to r	not install in high traffic		Battery Life	<ul> <li>Too frequent live playing. Frequent viewing of live video will affect battery performance.</li> <li>Make sure you have set the motion zone and distance for motion detection to reduce false alarms.</li> <li>Battery life will vary based on temperature, settings and number of events.</li> </ul>	Blurred Image	the camera to a different location.
2)This is a motion-activated c letected. We recommend to r	not install in high traffic			<ul> <li>Too frequent live playing. Frequent viewing of live video will affect battery performance.</li> <li>Make sure you have set the motion zone and distance for motion detection to reduce false alarms.</li> </ul>	Blurred Image NVR & Wi-Fi Disconnection	<ul> <li>Excessive environmental interference will affect the the camera to a different location.</li> <li>Pointing the camera at the window will produce a r</li> </ul>

